



Hello Again

Quick Start Guide Welcome to your Aqua mini & Aqua Pro

Overview what's in the box



Lighting Specification





	AQUA MINI	AQ
Item No.	G3-AM	G3-
Power	60W	120
LED Quantity	20pcs High Intensity	42p
LED Brand	3W Bridgelux / Epistar LEDs	ЗW
Light Weight	1.0kg (2.2pound)	2.0k
Shipping Weight	2.0kg (4.4pound)	3.5k
Size	140X140X46mm (5.5"x5.5"x1.8")	200
Packing	310x180x70mm (12"x7.0"x2.8")	430
Universal Input Range	AC80-240V, 2.0A	AC8
Lighting Cover	Suit For Min: 240mm ~ Max: 600mm	Suit
PSU Certification	UL, CE, Rosh, PSE, SAA etc.	UL,

AQUA PRO
G3-AP
120W
42pcs High Intensity
3W Bridgelux / Epistar LEDs
2.0kg (4.4pound)
3.5kg (7.7pound)
200X200X50mm (7.8"x7.8"x1.9")
430x230x70mm (17"x9.0"x2.8")
AC80-240V, 2.0A
Suit For Min: 400mm ~ Max: 900mm
UL, CE, Rosh, PSE, SAA etc.

Getting Started

Congratulations on purchasing your Aqua mini & Aqua Pro. Read this guide to get started to installing your lighting.

Super Bracket 0 2 ₿ 4



Mount Specification



Aqua mini Performance





- 7pcs Cool White (12000~16000K) ^{Channel A White}
- 7pcs Royal Blue (450~455nm) ^{Channel B Blue}
- 1pc Blue (470~475nm) ^{Channel C} Special
- 1pc Violet (410~415nm) ^{Channel C Special}
- 1pc UV (380~395nm) ^{Channel C Special}
- 1pc Warm White (3000~3500K) ^{Channel C Special}
- 1pc Deep Red (660~665nm) ^{Channel C Special}
- 1pc Green (510~520nm) ^{Channel C Special}



- O 7pcs White (6000~6500K) ^{Channel A White}
- 7pcs Cool White (12000~16000K) ^{Channel B Blue}
- ▶ 1pc Deep Blue (470~475nm) ^{Channel C}- Special
- 1pc Violet (410~415nm) ^{Channel C Special}
- 1pc UV (380~395nm) ^{Channel C Special}
- Ipc Warm White (3000~3500K) ^{Channel C Special}
- 1pc Deep Red (660~665nm) ^{Channel C Special}
- 1pc Green (510~520nm) ^{Channel C Special}

Aqua Pro Performance





- 14pcs Cool White (12000~16000K) Channel A White \bigcirc
- 14pcs Royal Blue (450~455nm) Channel B Blue
- 6pcs Blue (470~475nm) Channel C Special
- 2pcs Violet (410~415nm) Channel C Special
- 2pcs UV (380~395nm) Channel C Special
- 2pcs Warm White (3000~3500K) Channel C Special
- 1pc Deep Red (660~665nm) Channel C Special
- 1pc Green (510~520nm) ^{Channel C Special}

- 14pcs White (6000~6500K) Channel A White
- \bigcirc 14pcs - Cool White - (12000~16000K) ^{Channel B - Blue}

• 📩 •

- 4pcs Blue (470~475nm) Channel C Special
- 2pcs Violet (410~415nm) Channel C Special
- 2pcs UV (380~395nm) Channel C Special
- 2pcs Warm White (3000~3500K) ^{Channel C Special}
- 2pcs Deep Red (660~665nm) Channel C Special
- 2pcs Green (510~520nm) ^{Channel C Special}

Smart Control System



Home / Menu - Browse menu.

Special Function 1 : Hold on 3 second to return to the previous menu.

Special Function 2 : Hold on 3 second under the screen locked to quickly switch the "Auto mode" and "Manual mode".

Select / Adjust - Enter the sub-menu to adjust the parameters. Special Function 1: Hold on 3 second to unlock system.

Special Function 2: Hold on 3 second to lock system.

Setting Up Your Aqua mini & Pro now.

	Auto	Vode	Manual Mode			
Systems Loading iMOS 3.0M	05:30PM A L 33°C W:060% B:060%	05:30PM A LT 33°C 5:030%	05:30PM M L 33 [.] C W:100% B:100%	05:30PM M LT 33°C S:100%		
Boot screen	Home screen 1	Home screen 2	Home screen 1	Home screen 2		
Note: "A" = Auto Mode, " M " = Manual Mode, "L" = Locked, "LT" = Lightning ON.						

1) Set Clock

- 1. Hold Select/Lock for 3 seconds to unlock controller
- 2. Press 🔳 Home/Menu to enter main menu
- 3. Press 🔳 Home/Menu to toggle through options
- 4. Press 🔄 Select/Lock to select 1) Set Clock menu
- 5. Press 🕞 Select/Lock to adjust Time.
- 6. Press 🔳 Home/Menu to toggle through options
- 7. Press 🔳 Home/Menu to return to main menu



2) Auto Mode - Set LEDs (e.g: Set White Channel)	1) Set Clock 2) Auto Mode
1. Hold 🔄 Select/Lock for 3 seconds to unlock controller	ţ.
2. Press 🔳 Home/Menu to enter main menu	Set White
3. Press 🔳 Home/Menu to toggle through options	Set Blue
4. Press 🔄 Select/Lock to select 2) Auto Mode menu	Set Special
5. Press 😑 Select/Lock to select Set White menu	
6. Press 🔄 Select/Lock to adjust DawnTime.	
7. Press Home/Menu to toggle through options	
8. Press 🔳 Home/Menu to select Intensity	Dawn 06:00 AM
9. Press 🔄 Select/Lock to adjust Intensity.	Intensity 001%
10. Press 🔳 Home/Menu to toggle through options	Sunrise 07:00 AM
11. Press 🗉 Home/Menu to move to next setpoint	Intensity 050%
12. Repeat Steps 5-9 for Sunrise, Midday, Sunset, Dusk and Night	Midday 12:00 PM
13. Press 🔳 Home/Menu to return to main menu	Intensity 100%
Auto Maria (Oct Phys. 9, Operaid Oberges)	Sunset 03:00 PM
Auto Mode (Set Blue & Special Channel)	Intensity 100%
Cat the Dive Channel and Channel Channel are some as the White Charged are exist.	Dusk 07:00 PM
Set the Blue Channel and Special Channel are same as the White Channel operate step.	Intensity 050%
	Nisht 10:00 PM

Intensity

001%

Set	White	
Set	Blue	

Set	Blue
Set	Special

3) Manual Mode

- 1. Press 🔄 Select/Lock to select 3) Manual Mode menu
- 2. Press (I) Home/Menu to adjust Enable Manual Mode > Yes/No
- 3. Press (=) Select/Lock to enter the channel selection list
- 4. Press 🔳 Home/Menu to select the White, Blue, Special Channel
- 5. Press 🤄 Select/Lock to adjust Intensity for each channel
- 6. Press 🔳 Home/Menu to return to main menu

4) Lightning

The advanced settings allow you to control the time period storms will occur in a 24 hour period, the number of storms during this set time and the frequency at which a storm period is activated.

- 1. Hold 🔄 Select/Lock for 3 seconds to unlock controller
- 2. Press I Home/Menu to enter main menu
- 3. Press I Home/Menu to toggle through options
- 4. Press 🔄 Select/Lock to select 5) Set Lightning menu
- 5. Press I Home/Menu to set Start/End Hour
- 6. Press 🔄 Select/Lock to adjust Start/End Hour. Press 🗐 Home/Menu to toggle through options
- 7. Press I Home/Menu to return to previous menu
- 8. Press Select/Lock to adjust Enable Lightning > Yes/No
- 9. Press 🔳 Home/Menu to set Per Day and Frequency
- 10. Press 🔄 Select/Lock to adjust Per Day
- 11. Press I Home/Menu to set Frequency
- 12. Press 🔄 Select/Lock to adjust Frequency
- 13. Press 🔳 Home/Menu to return to main menu

B) Manual4) Lishtnin	
Į	
3) Manual	Mode
Enable	YES/NO
Į	
White	100%
Blue	100%
Special	100%

3) Manual M	1ode
4) Liahtnina	
ţ	
4) Liahtnina	
Enable '	YES/NO
Ť	
Start Hour	ODAM
Start Hour End Hour	OOPM
Per Day	00
Frequence	00

5) Demo

1. Press 🔳 Home/Menu button to enter main menu

- 2. Press I Home/Menu button to select 5) DEMO
- 3. Press 😔 Select/Lock button to select YES
- Note: The DEMO will show all your settings in 1 minute

6) Factory Reset

- 1. Press I Home/Menu button to enter main menu
- 2. Press I Home/Menu button to select Factory Reset
- 3. Press 🔄 Select/Lock button to select YES
- 4. Press I Home/Menu button to set Factory Reset





The Control system will gradually ramp the intensity of LED between set points. The graph below outlines how the LEDs will ramp up and down between settings.



The sample settings below can be used to create different color spectrums in your tank.

10K White						
	Dawn	Sunrise	Midday	Sunset	Dusk	Night
White	0%	80%	100%	100%	80%	0%
Channel A	@ 6:00AM	@ 8:00 AM	@ 12:00 PM	@ 3:00 PM	@ 6:00 PM	@ 8:00 PM
Blue	1%	25%	50%	50%	25%	1%
Channel B	@ 6:00AM	@ 7:00 AM	@ 10:00 PM	@ 3:00 PM	@ 6:00 PM	@ 8:00 PM
Special	0%	50%	75%	75%	50%	0%
Channel C	@ 6:00AM	@ 8:00 AM	@ 12:00 PM	@ 3:00 PM	@ 6:00 PM	@ 8:00 PM

15K White & Blue						
	Dawn	Sunrise	Midday	Sunset	Dusk	Night
White	0%	80%	100%	100%	80%	0%
Channel A	@ 6:00AM	@ 8:00 AM	@ 12:00 PM	@ 3:00 PM	@ 6:00 PM	@ 8:00 PM
Blue	1%	80%	10%	100%	80%	1%
Channel B	@ 6:00AM	@ 7:00 AM	@ 10:00 PM	@ 3:00 PM	@ 6:00 PM	@ 8:00 PM
Special	0%	50%	75%	75%	50%	0%
Channel C	@ 6:00AM	@ 8:00 AM	@ 12:00 PM	@ 3:00 PM	@ 6:00 PM	@ 8:00 PM

20K Heavy Blue						
	Dawn	Sunrise	Midday	Sunset	Dusk	Night
White	0%	25%	50%	50%	25%	0%
Channel A	@ 6:00AM	@ 8:00 AM	@ 12:00 PM	@ 3:00 PM	@ 6:00 PM	@ 8:00 PM
Blue	0%	25%	50%	50%	25%	0%
Channel B	@ 6:00AM	@ 7:00 AM	@ 10:00 PM	@ 3:00 PM	@ 6:00 PM	@ 8:00 PM
Special	0%	50%	75%	75%	50%	0%
Channel C	@ 6:00AM	@ 8:00 AM	@ 12:00 PM	@ 3:00 PM	@ 6:00 PM	@ 8:00 PM







Information

WARNING: Never push objects of any kind into this product through the ventilation openings in the case. Doing so may be dangerous and damage your light.

Important Handling Information

NOTICE: Failure to follow these handling instructions could result in damage to your Aqua mini & Pro or other property.

Carrying your Aqua mini & Pro before you move your Aqua mini & Pro, shut it down and disconnect all cables and cords connected to it. Using power cord Never force a connector into a port. Don't put the power cord into your tank when it connected. When you Setup your Aqua mini & Pro please make sure that there are no loose items (such as paper, metal or other) that could accidentally get inside the Aqua mini & Pro through vent openings or get stuck inside a port.

Mount your power supply where it won't get wet. Include a "drip loop" - a tied loop of cord hanging down below the level of the electrical outlet. That way, if water happens to run down the cord from the tank, it will drip off onto the floor rather than into the outlet. Drip Loops should always be used to help prevent water from traveling along the cord and coming into contact with an electrical outlet. Drip loops must always be below the level of the outlet. If the plug or outlet does get wet, DO NOT TOUCH the cord.

Storing your Aqua mini & Pro If you are going to store your Aqua mini & Pro for an extended period of time, keep it in a cool location (ideally, 71° F or 22° C). When cleaning the outside of your Aqua mini & Pro, first shut down your Aqua mini & Pro and unplug the power cord. Then use a damp, soft, lint-free cloth to clean the lamp exterior. Avoid getting moisture in any openings. Do not spray liquid directly on the lamp. Do not use aerosol sprays, solvents, or abrasives that might damage the finish.

MicMol and the Environment

MicMol. recognizes its responsibility to minimize the environmental impact of its operations and products.

0

Warranty

MicMol warrants all MicMol products to be free from manufacturing defects for one year from the original purchase date when purchased through an authorized MicMol retailer. This warranty does not cover any damages caused by misuse, neglect, alterations or improper handling / transport / maintenance / installation. Physical damages are not covered by warranty. MicMol does not cover personal injury, personal loss, or other damages associated with the use of our products. In order to request warranty service, please email us at support@micmol.com. A purchase receipt is required for any warranty service. Products requiring warranty service must be returned to MicMol or authorized MicMol retailer. You are responsible for the cost of shipping a warranty claim to MicMol and any damages that may occur during transit. Once a returned product has been inspected, it will be repaired or exchanged at our discretion and returned to you. Thank you very much.



© 2012~2018 MicMol Limited. All rights reserved. MicMol , the MicMol logo, Aqua mini, Aqua Pro, Aqua Air, Aqua CC, BloomBee are trademarks of MicMol registered. MP003-1720-A Printed in China